01 • VUE ÉCLATÉE PRINCIPALE

concept 2

SKIERG 2 SCHEMATIC

concept2.com/ski

Drive cord and shock cord removed for clarity.

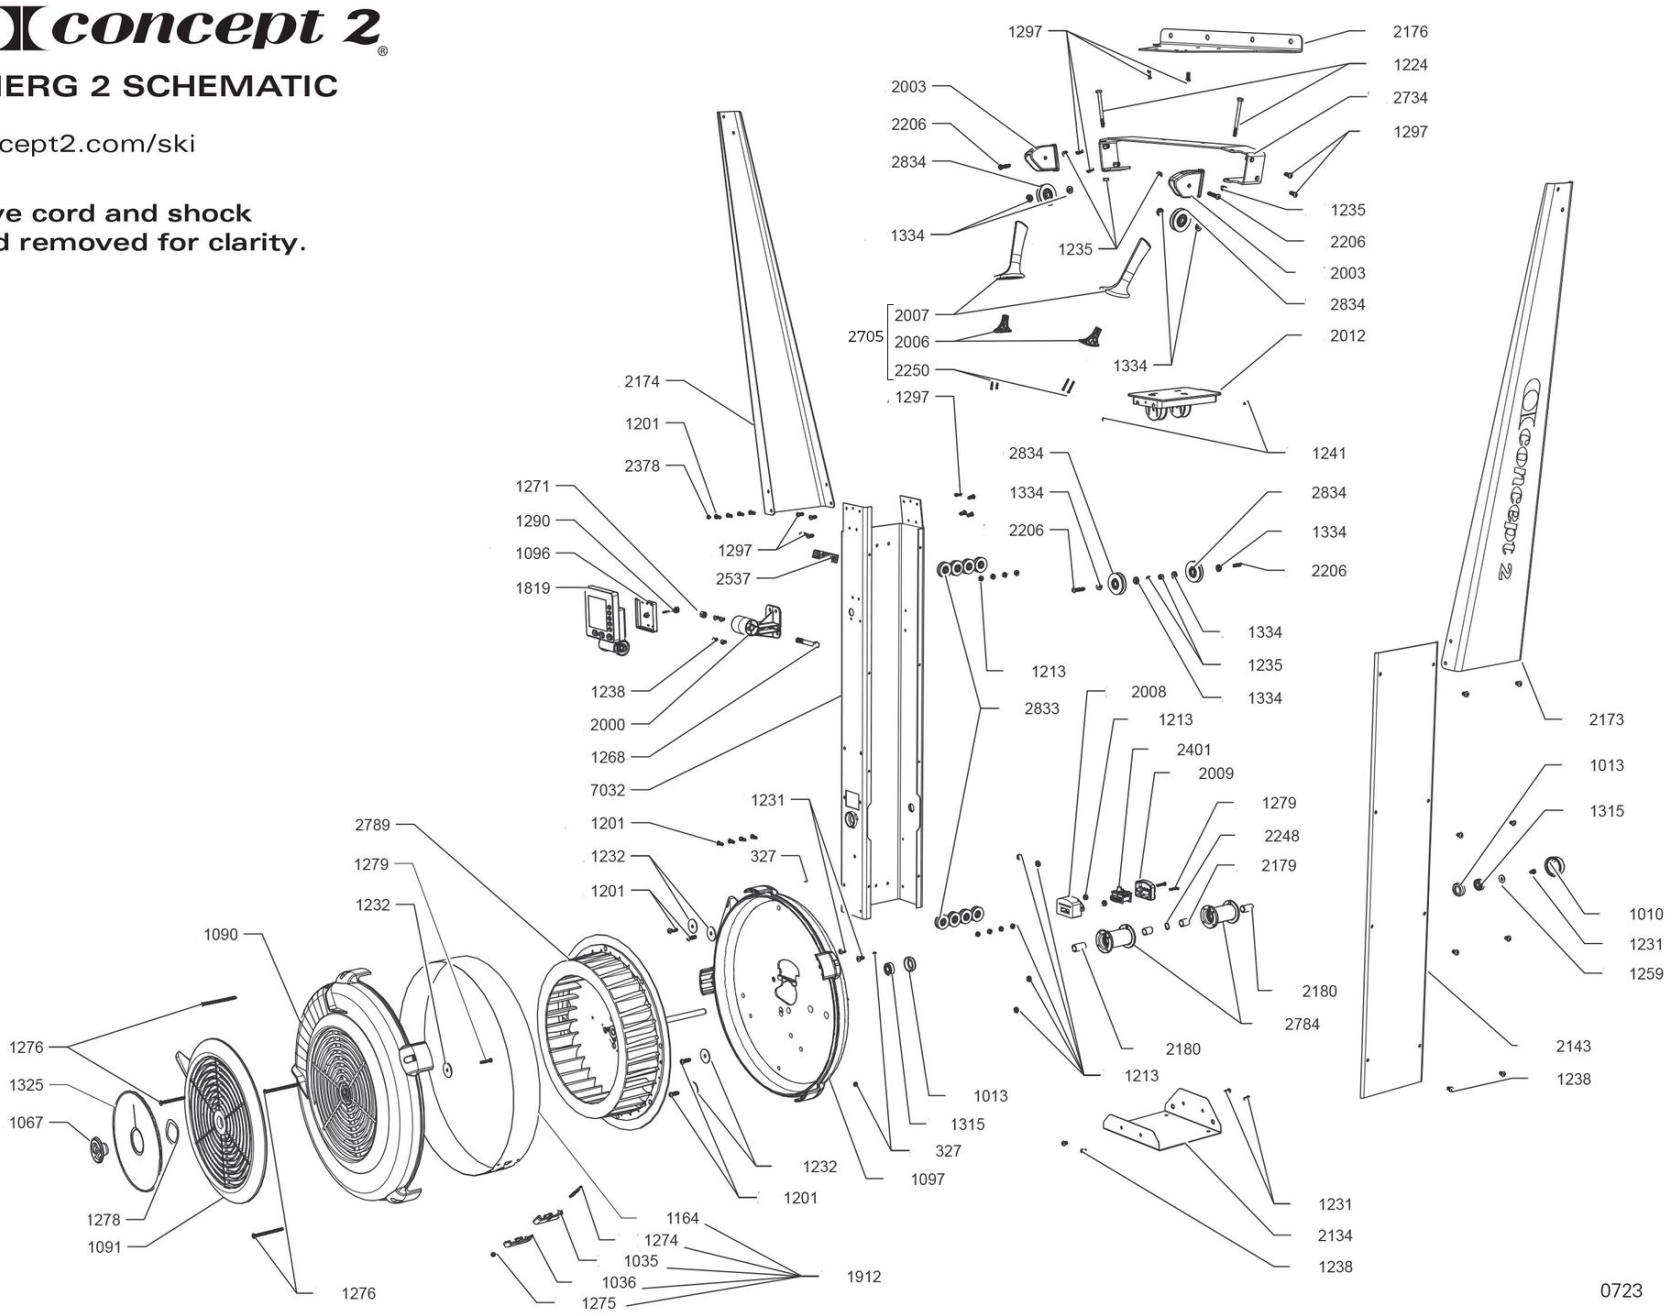

02 • CORDES DE TIRAGE ET DE RAPPEL

SHOCK AND HANDLE CORDS

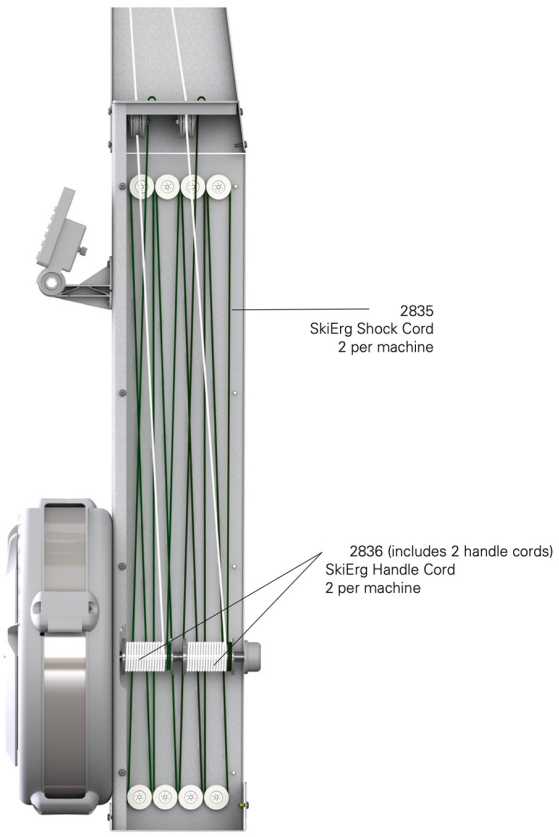

03 • PLATEFORME

concept 2

SKIERG 2 FLOOR STAND SCHEMATIC

SkiErg Floor Stand Part Identification List

PN	Description
1059	Right Footcaster Assembly
1060	Left Footcaster Assembly
1231	1/4-20 x .5
1259	Black Washer
2014	Foot Pad
2176	Universal Mounting Bracket
2181	Floor Stand U-Bar
2182	U-Bar Bracket
2206	1/4-20 x 1.25
2251	T-nut No Prongs
2252	Phillips Flat Head Tapping Screw
2782	Anti Skid Deck w/T-nuts

0615 concept2.com/ski

04 • RONDELLE SUR L'AXE

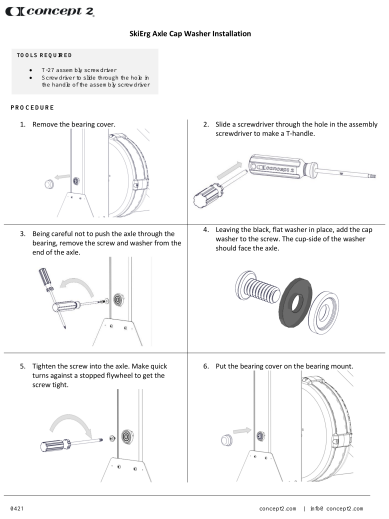

concept 2

SkiErg Axle Cap Washer Installation

TOOLS REQUIRED

- T-27 assembly screwdriver
- Screwdriver to slide through the hole in the handle of the assembly screwdriver

PROCEDURE

1. Remove the bearing cover.
2. Slide a screwdriver through the hole in the assembly screwdriver to make a T-handle.
3. Being careful not to push the axle through the bearing, remove the screw and washer from the end of the axle.
4. Leaving the black, flat washer in place, add the cap washer to the screw. The cup-side of the washer should face the axle.
5. Tighten the screw into the axle. Make quick turns against a stopped flywheel to get the screw tight.
6. Put the bearing cover on the bearing mount.

0421 concept2.com | 1-800 concept2.com